



General duty 100 amp

Switch catalog number		Line base assembly ¹⁾²⁾	Load base assembly ¹⁾	Handle / handle guard	Mechanism assembly	Wire grips assembly ³⁾	Neutral assembly
Type 1	Type 3R						
Fusible							
GF223N GF323N	GF223NR GF323NR	HFB63	HBB63	GH223	HM6123	HL63	HN623
Non-Fusible							
GNF323	GNF323R	HNB623	—	GH223	HM6123	HL63	HN623

- 1) Line and load base assemblies include wire grips.
- 2) Line base assembly does not include neutral assembly.
- 3) Three wire grips per kit.

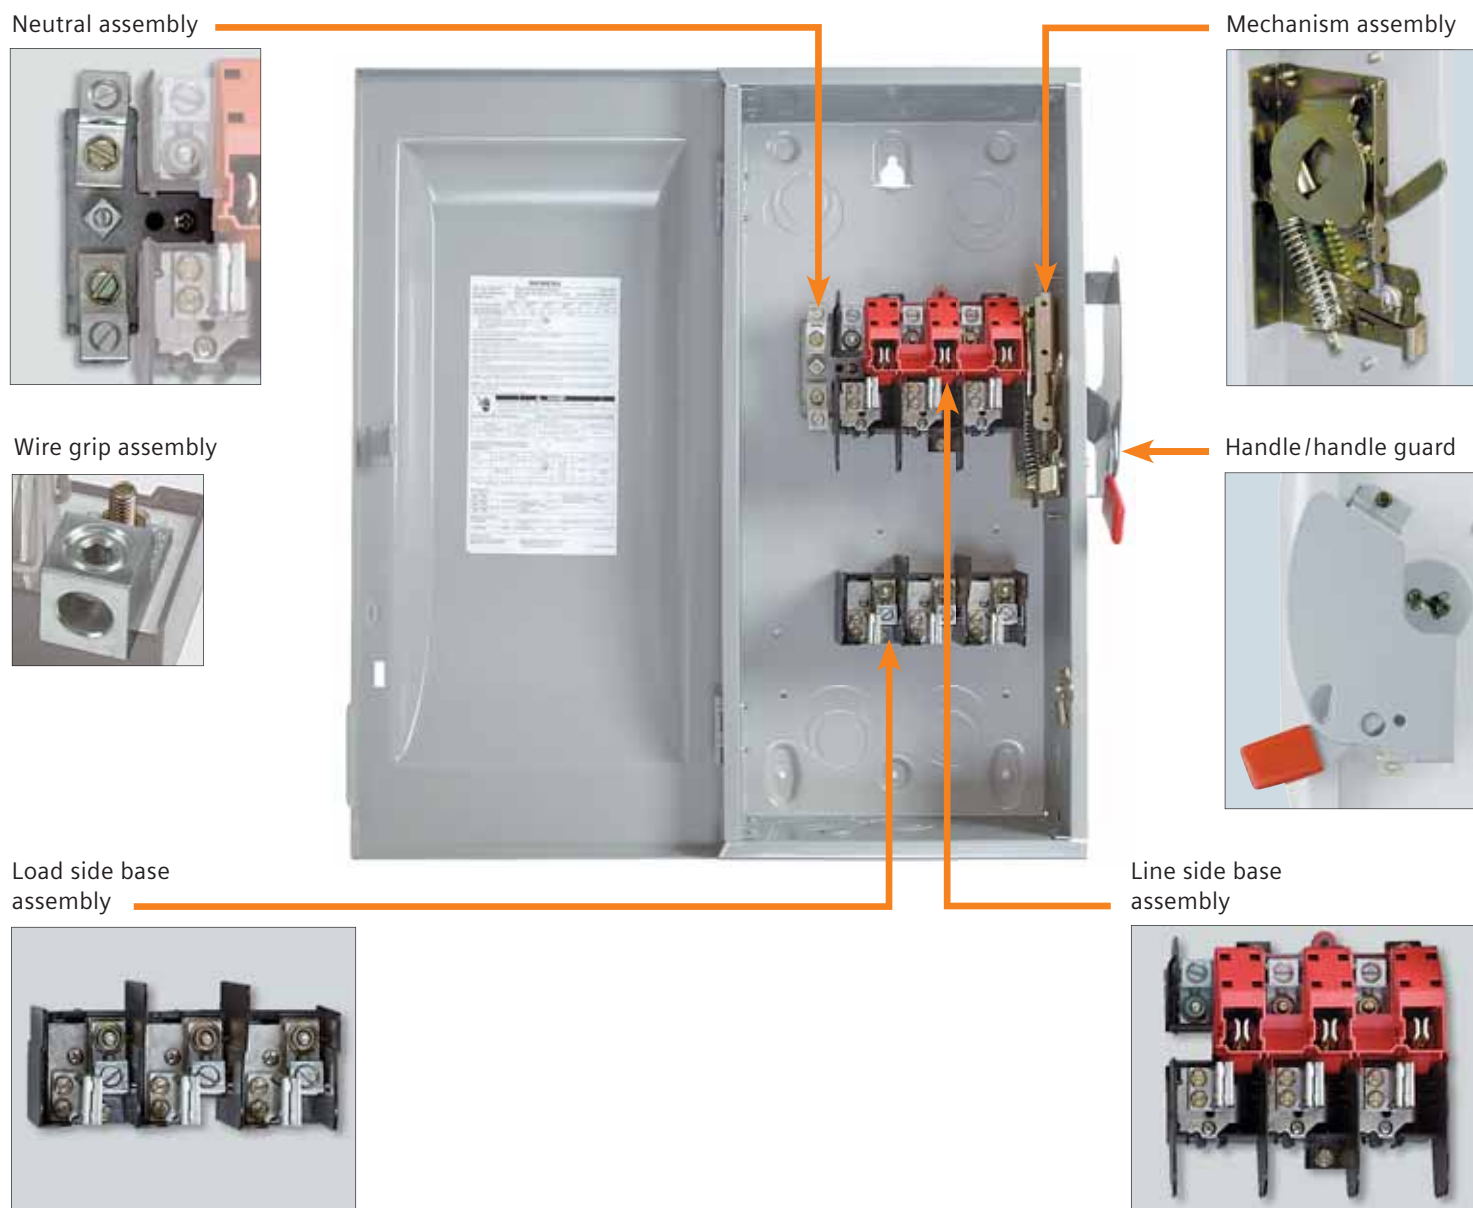

Heavy duty 60 amp

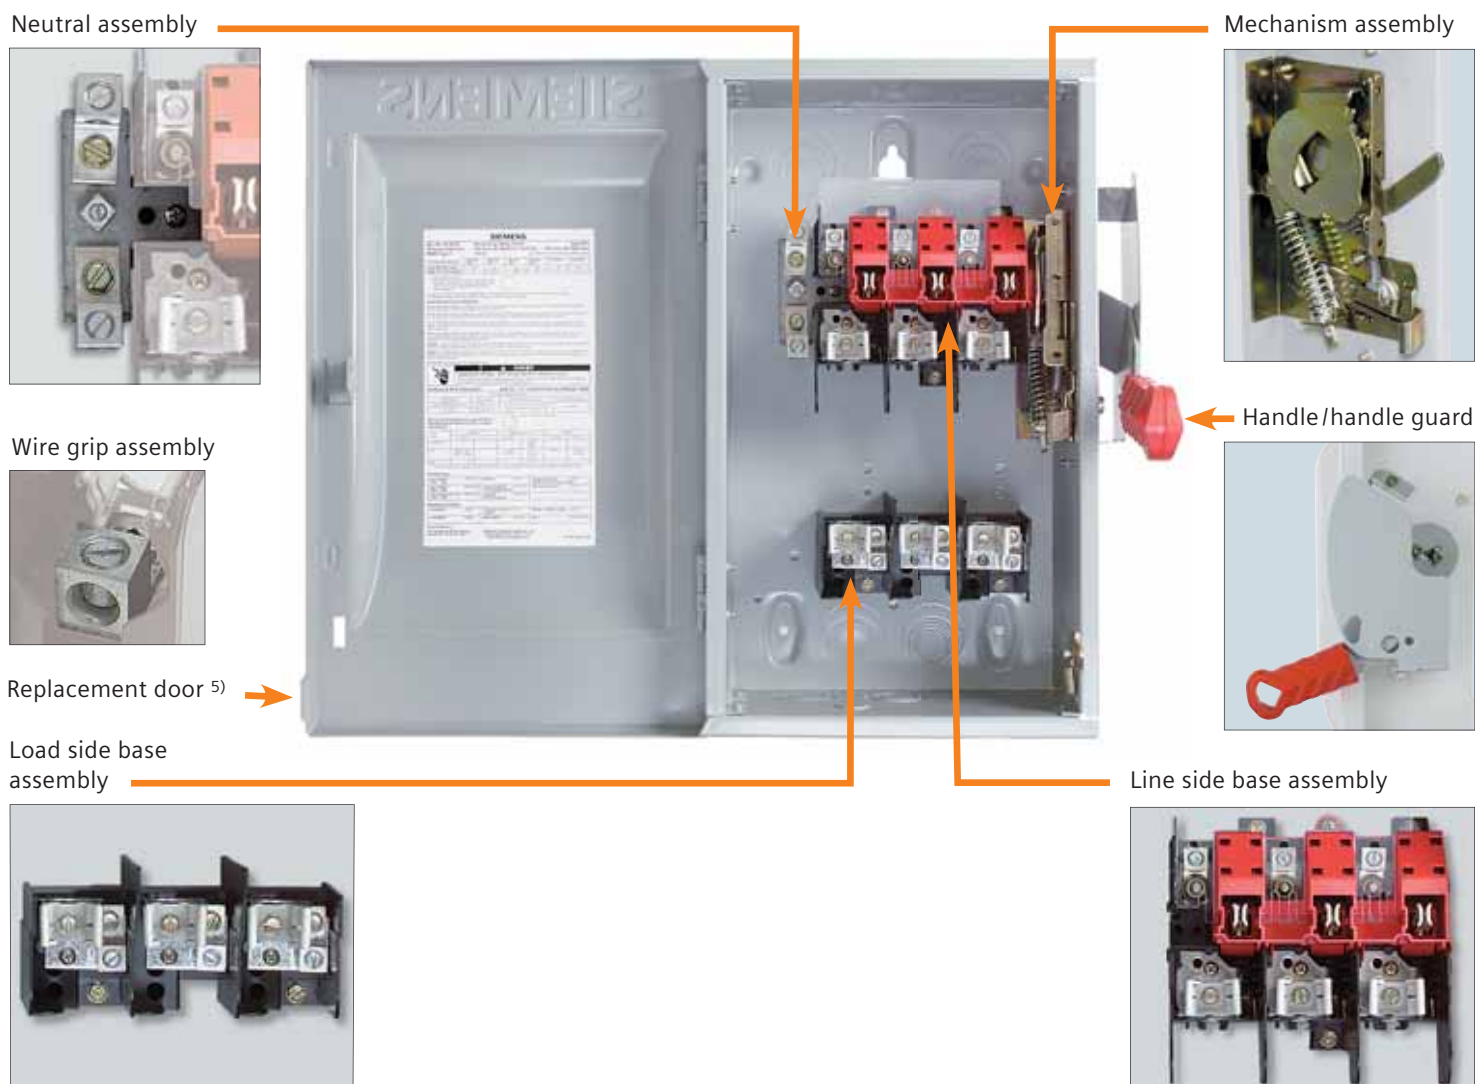

Switch catalog number				Line base assembly 1) 2)	Load base assembly 1)	Handle / handle guard	Mechanism assembly	Wire grips assembly 3)	Neutral assembly
Type 1	Type 3R	Type 4/4X	Type 12						
240 Volts Fusible									
HF222N	HF222NR	HF222S ⁴⁾	HF222J	HFB22	HBB22	HH6123 ⁴⁾	HM6123 ⁴⁾	HL612	HN623
HF322N	HF322NR	HF322S ⁴⁾	HF322J						
600 Volts Fusible									
HF262	HF262R	HF262S ⁴⁾	HF262J	HFB612	HFB612	HH6123 ⁴⁾	HM6123 ⁴⁾	HL612	HN623
HF362	HF362R	HF362S ⁴⁾	HF362J						
HF362N	HF362NR	—	—						
—	—	HF362SW ⁴⁾	HF362JW						
600 Volts Non-Fusible									
HNF262	HNF262R	HNF262S ⁴⁾	HNF262J	HNB623	—	HH6123 ⁴⁾	HM6123 ⁴⁾	HL612	HN623
HNF362	HNF362R	HNF362S ⁴⁾	HNF362J	HNB623					
HNF362H	HNF362RH	HNF362SH ⁴⁾	HNF362JH	HNB612					
—	—	HNF362SW ⁴⁾	HNF362JW	HNB623					HN623 HN623 HN612 HN623

1) Line and load base assemblies include wire grips.
 2) Line base assembly does not include neutral assembly.
 3) Three wire grips per kit.

4) For Type 4/4X switches, place an "S" on the end of the catalog number for the replacement handle and mechanism. i.e: HH6123 becomes HH6123S.
 5) Note: For a replacement door, place "DOOR" at the end of the switch catalog number. i.e: HF222NDOOR.

Heavy duty 100 amp

Switch catalog number				Line base assembly 1) 2)	Load base assembly 1)	Handle / handle guard	Mechanism assembly	Wire grips assembly 3)	Neutral assembly
Type 1	Type 3R	Type 4/4X	Type 12						
240 and 600 Volts Fusible									
HF223N	HF223NR	HF223S 4)	HF223J	HFB63	HBB63	HH6123 4)	HM6123 4)	HL63	HN623
HF263	HF263R	HF263S 4)	HF263J						
HF323N	HF323NR	HF323S 4)	HF323J						
HF363	HF363R	HF363S 4)	HF363J						
HF363N	HF363NR	—	—						
—	—	HF363SW 4)	HF363JW						
600 Volts Non-Fusible									
HNF263	HNF263R	HNF263S 4)	HNF263J	HNB623	—	HH6123 4)	HM6123 4)	HL63	HN623
HNF363	HNF363R	HNF363S 4)	HNF363J						
—	—	HNF363SW 4)	HNF363JW						

- 1) Line and load base assemblies include wire grips.
- 2) Line base assembly does not include neutral assembly.
- 3) Three wire grips per kit.

- 4) For Type 4/4X switches, place an "S" on the end of the catalog number for the replacement handle and mechanism. i.e: HH6123 becomes HH6123S.
- 5) Note: For a replacement door, place "DOOR" at the end of the switch catalog number. i.e: HF223NDOOR.

