

## WL Spare/Replacement Parts

### Circuit Breaker Accessories



Shunt Trip Coil



Auxiliary Contact



Ready-to-Close Contact



Bell Alarm Reset Coil



Bell Alarm Contacts



Operations Counter

Catalog number	
<b>Shunt trip release</b>	
<b>WLST24</b>	Shunt trip 24VDC, 3-cycle, momentary duty
<b>WLST48</b>	Shunt trip 48VDC, 3-cycle, momentary duty
<b>WLST120</b>	Shunt trip 125VDC / 120VAC, 3-cycle, momentary duty
<b>WLST240</b>	Shunt trip 250VDC / 240VAC, 3-cycle, momentary duty
<b>WLSTCD24</b>	Shunt trip 24VDC, continuous duty
<b>WLSTCD48</b>	Shunt trip 48VDC, continuous duty
<b>WLSTCD120</b>	Shunt trip 125VDC / 120VAC, continuous duty
<b>WLSTCD240</b>	Shunt trip 250VDC / 240VAC, continuous duty
(signal contactor 1st Shunt Trip)	
<b>WLSTC</b>	Shunt trip "NO" switch - 3A @ 240VAC
(signal contactor second Shunt Trip)	
<b>WLUVRC</b>	Undervoltage trip "NO" switch - 3 @ 240VAC
<b>Auxiliary signaling switch</b>	
<b>WLAS2</b>	2 NO & 2 NC contacts
<b>WLAS4</b>	4 NO & 4 NC contacts
<b>Ready-to-close signal switch</b>	
<b>WLRTCS</b>	Ready-to-close contact, 1 NO, 4A @ 240VAC
<b>Bell alarm</b>	
Remote reset solenoid for bell-alarm and trip indicator	
<b>WLRSET24</b>	Bell alarm reset coil 24VDC
<b>WLRSET48</b>	Bell alarm reset coil 48VDC
<b>WLRSET120</b>	Bell alarm reset coil 125VDC / 120VAC
<b>WLRSET240</b>	Bell alarm reset coil 250VDC / 240VAC
<b>WLBA</b>	Bell alarm - Form "C" - 1NO/1NC contact
<b>Operation Counter</b>	
Available ONLY w/ spring charging motor option	
<b>WLNUMCNT</b>	Mechanical operation counter